

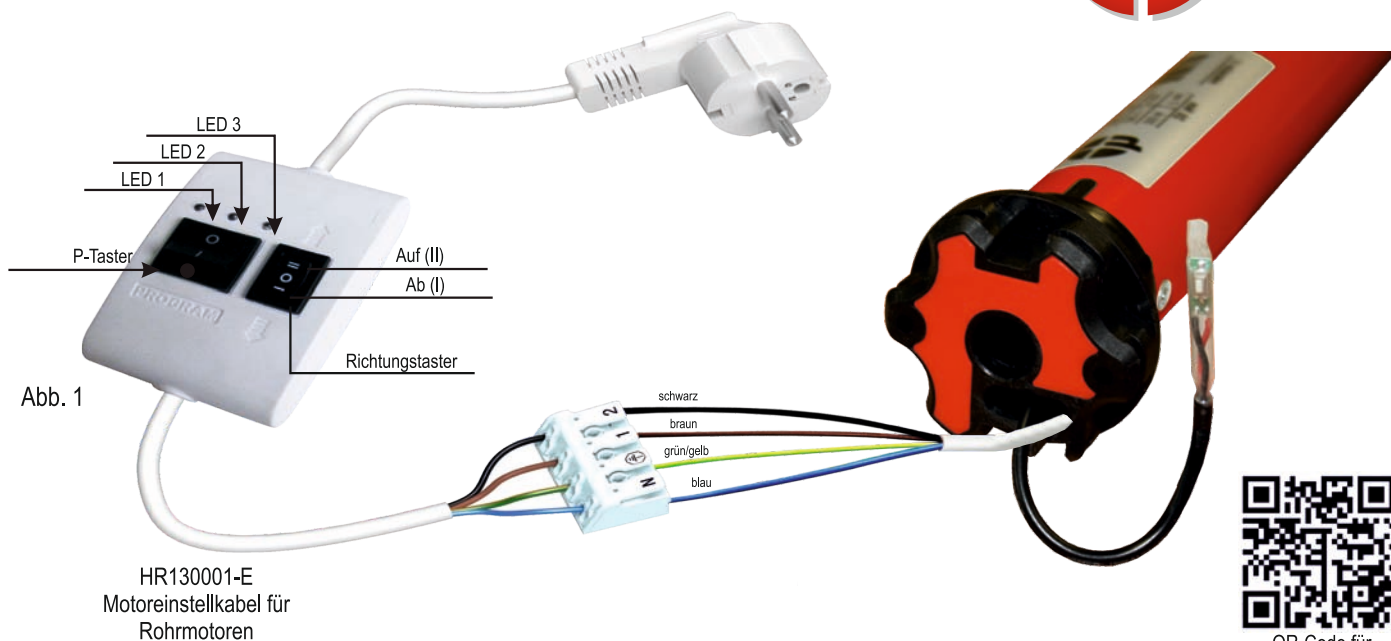


Abb. 1

HR130001-E
Motoreinstellkabel für
Rohrmotoren



QR-Code für
Bedienungsanleitung

Hinweis! - Schließen Sie den Motor so an, dass die Bewegungsrichtung des Motors mit der Auf- u. Ab-Richtung des Richtungstasters übereinstimmt.

Technische Daten

- Betriebsspannung: 230 V / 50 Hz
- Max. Last: 400 W

Hinweise

Achtung!

Lesen Sie vor der Inbetriebnahme die Bedienungsanleitung des Motoreinstellkabels sowie auch des Rohrmotors aufmerksam durch und beachten Sie deren Hinweise.

Hinweis:

Die beschriebenen Funktionen zur Einstellung der Endlagen sind ausschließlich bei unseren folgenden Rohrmotoren-Serien anwendbar: HRE, HREBH, ERE. Halten Sie unbedingt die Anleitung des jeweiligen Rohrmotors bereit.

Bestimmungsgemäßer Gebrauch

Dieses Einstellkabel ist ausschließlich zum Bedienen und Einstellen von Rohrmotoren bestimmt. Die Hinweise dieses Merkblattes sind unbedingt zu beachten, wie auch zu befolgen.

Die Funktionen des Gerätes werden elektronisch gesteuert. Um das Gerät vor Funktionsstörungen oder/und Beschädigungen zu schützen, vermeiden Sie daher unbedingt in unmittelbarer Nähe Schmutz, Staub, Feuchtigkeit, starke Erschütterungen, etc.

Mechanisch einstellbare Motoren können mit diesem Gerät betrieben bzw. bewegt werden, um deren Endlagen dann mit den Einstellrichtungen des Motors einzustellen. Die P-Taste darf bei diesen Motortypen **nicht** betätigt werden, da sonst der elektrische Antrieb beschädigt wird. Vergewissern Sie sich daher vor Inbetriebnahme des HR130001-E darüber, welcher Motortyp Ihnen vorliegt.

Einstellen der Endlagen mit dem Motoreinstellkabel HR130001-E

Hinweis! - Die Einstellung der Endlagen mit dem E-Knopf am Motorkopf ist in der Anleitung des Motors beschrieben.

Obere Endlage



Bewegen Sie den Behang durch Drücken des Richtungstasters bis zur gewünschten oberen Endlage und stoppen. Während der Motor in Betrieb ist leuchtet LED 1 auf.

Nun P-Taster gedrückt halten und LED 1 leuchtet. Nach ca. 2 Sek. leuchtet LED 2 auf, dann P-Taster loslassen und zum nächsten Schritt.

Drücken Sie jetzt den Richtungstaster in Richtung „Aufwärts“, halten ihn für 2 Sek. gedrückt und lassen den Taster dann los. Die obere Endlage ist jetzt gespeichert.

Untere Endlage



Bewegen Sie den Behang durch Drücken des Richtungstasters bis zur gewünschten unteren Endlage und stoppen. Während der Motor in Betrieb ist leuchtet LED 1 auf.



2 Sek.



Nun P-Taster gedrückt halten und LED 1 leuchtet. Nach ca. 2 Sek. leuchtet LED 2 auf, dann P-Taster loslassen und zum nächsten Schritt.



2 Sek.

Drücken Sie jetzt den Richtungstaster in 'Richtung „Abwärts“', halten ihn für 2 Sek. gedrückt und lassen den Taster dann los. Die untere Endlage ist jetzt gespeichert.

Löschen der Endlagen mit dem Motoreinstellkabel HR130001-E

Variante A



10 Sek.

Drücken Sie den P-Taster und halten ihn gedrückt bis LED 3 leuchtet (nach ca. 10 Sek.) Beide Endlagen sind jetzt gelöscht.

Variante B




2 Sek.

Nun P-Taster gedrückt halten und LED 1 leuchtet. Nach ca. 2 Sek. leuchtet LED 2 auf, dann P-Taster loslassen und zum nächsten Schritt.



1x kurz

Drücken Sie jetzt 1x kurz den Richtungstaster in 'Richtung „Aufwärts“' und gehen zum nächsten Schritt.

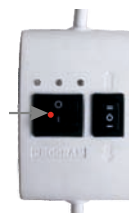

Nun wieder P-Taster gedrückt halten und LED 1 leuchtet. Nach ca. 2 Sek. leuchtet LED 2 auf, dann P-Taster loslassen und zum nächsten Schritt.




1x kurz

Drücken Sie jetzt 1x kurz den Richtungstaster in „Richtung Abwärts“. Beide Endlagen sind jetzt gelöscht.

© 2018 - Vervielfältigung und Nachdruck von Bildern, Texten und sonstigen Inhalten zu anderen als rein privaten Zwecken bedarf unserer ausdrücklichen und schriftlichen Einwilligung. Gegen die unzulässige Nutzung der Inhalte behalten wir uns alle rechtlichen Maßnahmen vor.

Technische Änderungen, Druckfehler und Irrtümer vorbehalten. Fotos und sonstige Abbildungen sind unverbindlich. Abbildungen können modell-/typenabhängig variieren.

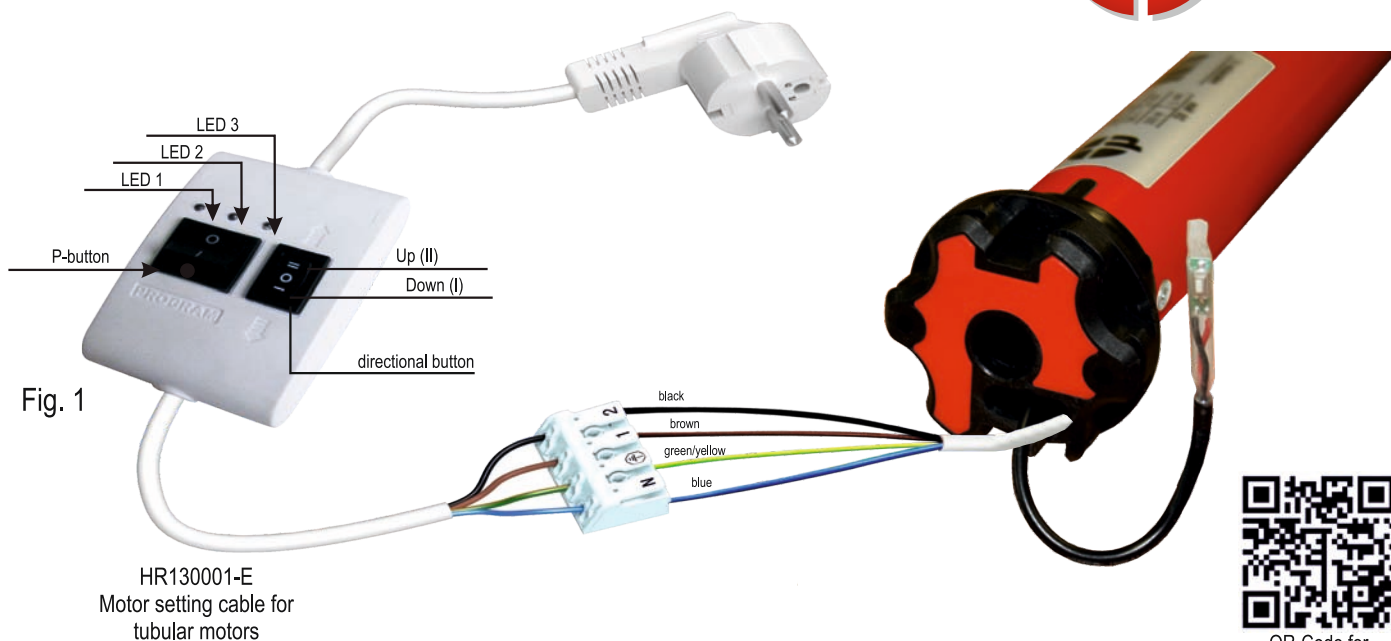

Note! - Connect the motor in such a way that the direction of movement of the motor coincides with the up and down direction of the directional button.

Technical Data

- Operating Voltage: 230 V / 50 Hz
- Max. Load: 400 W

Notes

Attention!

Before commissioning, carefully read the operating instructions for the motor setting cable as well as the instructions for the tubular motor and observe its instructions.

Note:

The described functions for adjusting the limit positions are only applicable for our following tubular motor series: HRE, HREBH, ERE. Be sure to follow the instructions for the respective tubular motor.

Intended Use

This setting cable is intended exclusively for the operation and adjustment of tubular motors. The notes of this leaflet have to be observed, as well as to be followed.

The functions of the device are electronically controlled. In order to protect the device against malfunctions and / or damage, it is very important to avoid dirt, dust, moisture, strong vibrations, etc. in the immediate vicinity.

Mechanically adjustable motors can be operated or moved with this device in order to adjust their end positions with the setting devices of the motor. The P-button must **not** be operated with these types of motors, as it will damage the electric drive. Before you start up the HR130001-E, please check which type of motor you have.

Adjusting the limit positions with the motor setting cable HR130001-E

Note! - The setting of the limit positions with the E-button on the motor head is described in the instructions for the motor.

Upper limit position




Move the blind to the desired upper limit position by pressing the directional button and stop. While the motor is running, LED 1 is lit.

Now hold down the P-button and LED 1 lights up. After approx. 2 sec., LED 2 lights up, then release the P-button and go to the next step.

Press the directional button in the direction "Up", hold it down for 2 sec. and then release it. The upper limit position is now saved.

Lower limit position

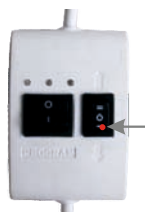

Move the blind by pressing the directional button to the desired lower end position and stop. While the motor is running, LED 1 is lit.



2 Sec.



Now hold down the P-button and LED 1 lights up. After approx. 2 sec., LED 2 lights up, then release the P-button and go to the next step.



2 Sec.

Now press the directional button in the direction "Down", hold it down for 2 sec. and then release it. The lower limit position is now saved.

Deleting the limit positions with the motor setting cable HR130001-E


Option A



10 Sec.

Press the P-button and hold it down until LED 3 lights up (after approx. 10 sec.). Both limit positions are now deleted.

Option B

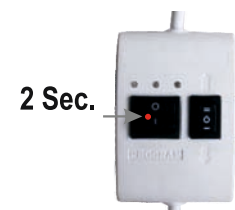


2 Sec.

Now hold down the P-key and LED 1 lights up. After approx. 2 sec., LED 2 lights up, then release the P-key and go to the next step.



1x short

Now press 1x the directional button in the direction "Up" and go to the next step.

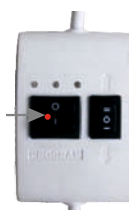

Now press the P-button again and LED 1 lights up. After approx. 2 sec., LED 2 lights up, then release the P-button and go to the next step.



1x short

Now press the directional button 1x briefly in "Downwards direction". Both limit positions are now deleted.

© 2018 - Reproduction and reproduction of images, texts and other content for purposes other than purely private needs our express and written consent. We reserve the right to take legal action against the unauthorized use of the content.

Technical changes, printing errors and mistakes reserved. Photos and other illustrations are not binding. Illustrations may vary by model / type.