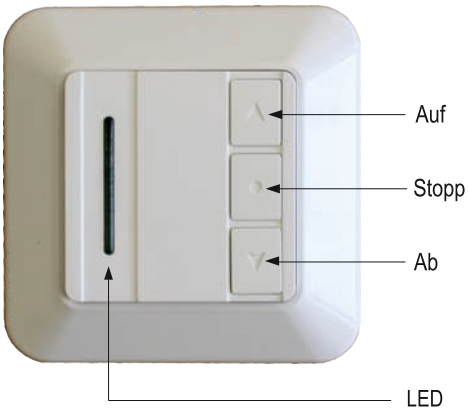

HR120032WA
1-Kanal Wand-/Handfunksender

QR-Code für
Bedienungsanleitung

Technische Daten

- Batterie 3 V, CR2032
- Frequenz 433,92 MHz
- Umgebungstemperatur: -20°C bis 60°C
- Abmessung Wandrahmen: 80 x 80 mm
- Abmessung Einsatz: 50 x 50 mm
- Gesamtabmessungen: 80 x 80 x 17,5 mm

Hinweise

Achtung!
Lesen Sie vor der Inbetriebnahme die Bedienungsanleitungen des Handfunkfunksenders sowie auch des Funkrohrmotors/Empfängers aufmerksam durch und beachten Sie deren Hinweise.

Wichtige Hinweise!
Die hier beschriebenen Wand-/Handfunksender ist ausschließlich für die Funksignalübertragung zu unseren Funkrohrmotoren-Serien HRF, HREF, HREFBH, ERF, EREF, EREFL, ERFN, ERSDC (ausgenommen ERSDC3808-30) und HRSDC sowie zu unseren Funkempfänger-Modellen HR120032A, HR120033A und HR120036A vorgesehen. Zu anderen Funksystemen sind sie **nicht** kompatibel.

Der Umfang dieser Anleitung beschränkt sich auf die Beschreibung des Wand-/Handfunksenders als Bedienungselement. Die Beschreibung der Programmierung („Einlernen" etc.) in Bezug auf die o.g. Funkrohrmotoren sowie Funkempfänger erfolgt in den Anleitungen der Funkrohrmotoren und Empfänger.

1-Kanal Wand-/Handfunksender mit LED

Der Einsatz kann dem Rahmen einfach durch herausziehen entnommen werden, er wird lediglich magnetisch im Rahmen gehalten. Dadurch ist der Einsatz völlig unabhängig vom Montageort des Rahmens. Im Rahmen hinter dem Einsatz befinden sich zwei Löcher zur Befestigung des Rahmens durch Verschraubung.

Vermeiden Sie unnötig langes Drücken der Funktionstasten. Um eine Funktion auszulösen, genügen pro Vorgang 0,5 bis 1 Sekunden. Das verringert den Stromverbrauch und verlängert die Lebensdauer der Batterie.

Tauschen Sie bei nachlassendem Funksignal umgehend die Batterie aus. Bei zu schwacher oder gar leerer Batterie wird kein Funksignal zum Funkmotor oder Empfänger übertragen.
Der Batterietausch erfolgt über die Rückseite des Einsatzes (siehe Abb. oben). Lösen und entfernen Sie vorsichtig die Abdeckung auf der Rückseite, ziehen die Batterie aus der Halterung und setzen die neue Batterie ein. Achten Sie dabei unbedingt auf die korrekte Polung.

© 2018 - Vervielfältigung und Nachdruck von Bildern, Texten und sonstigen Inhalten zu anderen als rein privaten Zwecken bedarf unserer ausdrücklichen und schriftlichen Einwilligung. Gegen die unzulässige Nutzung der Inhalte behalten wir uns alle rechtlichen Maßnahmen vor.

Technische Änderungen, Druckfehler und Irrtümer vorbehalten. Fotos und sonstige Abbildungen sind unverbindlich. Abbildungen können modell-/typenabhängig variieren.

heicko e-ast gmbh
Käthe-Kollwitz-Straße 15
D-51545 Waldbröl

Kostenloses Bestellfax
0800 0 43 42 56

Tel.: +49 2291 9084 0
Fax: +49 2291 9084 50

www.heicko.de
verkauf@heicko.de

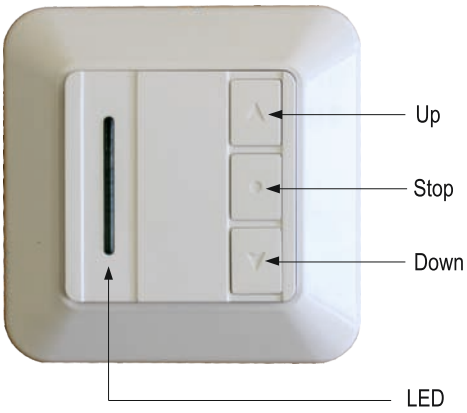

HR120032WA
1-Channel wall / hand-held emitter

QR-Code for
User manual

Technical Data

- Battery: 3 V, CR2032
- Frequency: 433.92 MHz
- Ambient temperature: -20°C to 60°C
- Dimensions wall frame: 80 x 80 mm
- Dimensions insert: 50 x 50 mm
- Total dimensions: 80 x 80 x 17,5 mm

References

Attention!
Please carefully read the operating instructions of the emitter as well as the instructions of the tubular motor with built-in receiver / external receiver before commissioning and observe ist instructions.

Important notes!
The emitter described is exclusively intended for the transmission of radio signals to our tubular motor series HRF, HREF, HREFBH, ERF, EREF, EREFL, ERFN, ERSDC (except ERSDC3808-30) and HRSDC as well as to our external receiver models HR120032A, HR120033A and HR120036A. It is **not** compatible with other radio systems.

The scope of this manual is limited to the description of the emitter as a control element. The description of the programming ("teaching", etc.) with respect to the above mentioned tubular motors with built-in receiver as well as the external receivers is given in the instructions for the tubular motors with built-in receivers and external receivers.

1-Channel wall / hand-held emitter with LED

The insert can be removed from the frame simply by pulling it out, it is only held magnetically in the frame. This makes the insert completely independent of the mounting location of the frame. In the frame behind the insert are two holes for fixing the frame by screwing.

Avoid unnecessarily long pressing of the function buttons. In order to activate a function, each operation takes 0.5 to 1 second. This reduces power consumption and prolongs the battery life.

If the radio signal lowers, replace the battery immediately. If the battery is too weak or even empty, no radio signal will be transmitted to the motor or receiver.
The battery is replaced by the back of the insert (see figure above). Carefully loosen and remove the cover on the back, pull the battery out of the holder and insert the new battery. It is very important to pay attention to the correct polarity!

© 2018 - Reproduction and reproduction of images, texts and other content for purposes other than purely private needs our express and written consent. We reserve the right to take legal action against the unauthorized use of the content.

Technical changes, printing errors and mistakes reserved. Photographs and other illustrations are not binding. Illustrations may vary by model / type.

heicko e-ast gmbh
Käthe-Kollwitz-Straße 15
D-51545 Waldbröl

Kostenloses Bestellfax
0800 0 43 42 56

Tel.: +49 2291 9084 0
Fax: +49 2291 9084 50

www.heicko.de
verkauf@heicko.de